





www.bilmola.com




REMOVAL





## INTERIOR


# LINER SET

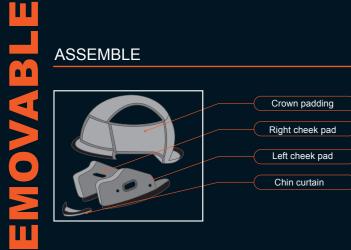

### REMOVABLE

The crown padding, left/right cheek pads and chin curtain are removable and washable. To disassemble and assemble the inner liner, please see the instructions and the figure below.

#### **CHEEK PADS**

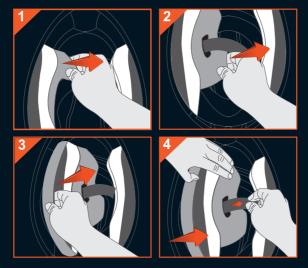

#### **CROWN PADDING**

### WASHABLE


### CLEANING

Apply soft cleaning soap with room temperature water, then dip the whole set of liners into the water for 5-10 mins. Squeeze the liners a few times to let water soak into the sponge.



### DRYING


Let the liners dry away from direct sunlight to avoid damage from UV light. For fast drying, use a hair dryer, but make sure the air temperature is not over 40 degrees Celsius to avoid damage that could affect the protective properties of the liner material.

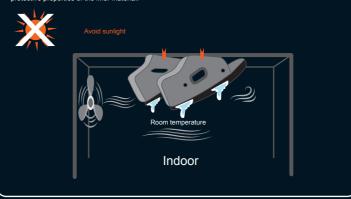



Get maximum benefits from your helmet with this information.

| _         |                           |                                     |
|-----------|---------------------------|-------------------------------------|
| MATERIALS | Shell materials           | Shock resistant thermoplastic (SRT) |
|           | Cushion materials         | Expanded polystyrene (EPS)          |
|           | Interior liners           | Active Air                          |
| ž         | Sun visor                 | Polycarbonate                       |
| Σ         | Type of retension system  | Stepping lock                       |
| SYSTEM    | Type of cushion structure | Multi density                       |
| sγ        | Removable interior        | Available                           |
| GENERAL   | Weights                   | 1400±50 g                           |
| GENE      | Standard certificated     | ECE R22.05 and TIS 369-2557         |

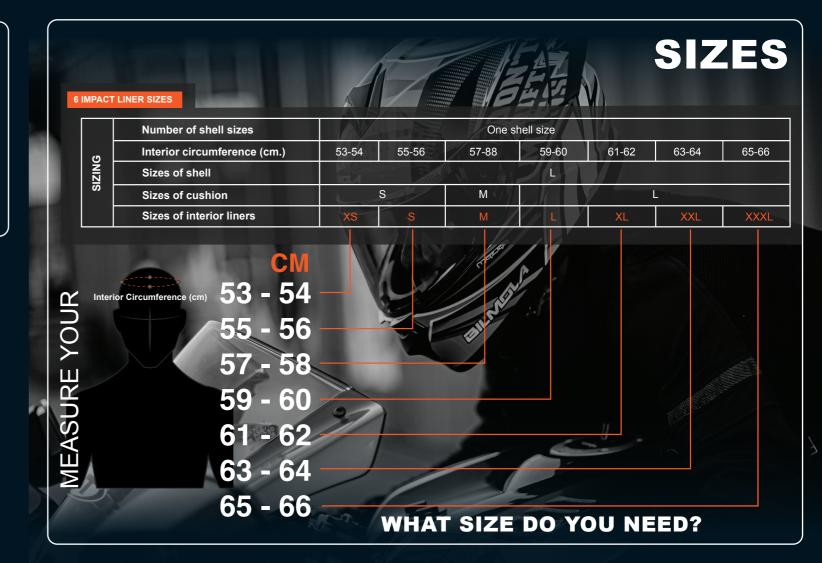

### HEADSET

### SPEAKER INSERT

Your helmet is ready for speaker installation. There is a 5 cm diameter cavity in each cheek pad for inserting stereo speakers.

